


ボス

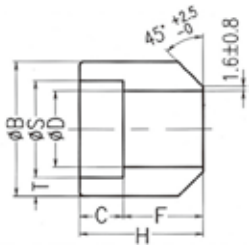

SW Sch80

単位:mm

呼び径(A)	呼び径(B)	S	C	D	F	H	B	T
6	1/8	11	10	7.1	15.9	25.9	18	2.7
8	1/4	14.3	10	9.4	15.9	25.9	22	3.3
10	3/8	17.8	10	12.7	17.5	27.5	26	3.5
15	1/2	22.2	10	16.1	22.2	32.2	32	4.1
20	3/4	27.7	13	21.4	23.8	36.8	38	4.3
25	1	34.5	13	27.2	28.6	41.6	46	5
32	1 1/4	43.2	13	35.5	30.2	43.2	55	5.4
40	1 1/2	49.1	13	41.2	31.8	44.8	65	5.6
50	2	61.1	16	52.7	41.3	57.3	75	6.1
65	2 1/2	77.1	16	65.9	42.9	58.9	95	7.7
80	3	90	16	78.1	44.5	60.5	110	8.4

SW Sch160

単位:mm

呼び径(A)	呼び径(B)	S	C	D	F	H	B	T
15	1/2	22.2	10	12.3	22.2	32.2	38	5.2
20	3/4	27.7	13	16.2	23.8	36.8	46	6.1
25	1	34.5	13	21.2	28.6	41.6	50	7
32	1 1/4	43.2	13	29.9	30.2	43.2	60	7
40	1 1/2	49.1	13	34.4	31.8	44.8	70	7.8
50	2	61.1	16	43.1	41.3	57.3	85	9.6
65	2 1/2	77.1	16	57.3	42.9	58.9	100	10.4
80	3	90	16	66.9	44.5	60.5	120	12.2